

REMOTE CONTROLLER (WIRED TYPE)

 
OPERATION MANUAL

[Original instructions]



PART No. 9373329763

Keep this manual for future reference.



UTY-RSRYT

SAFETY PRECAUTIONS

- To prevent personal injury or property damage, read this section carefully before you use this product, and be sure to comply with the following safety precautions.



WARNING

This mark indicates procedures which, if improperly performed, might lead to the death or serious injury of the user.

- In the event of a malfunction (burning smell, etc.), immediately stop operation, turn off the electrical breaker, and consult authorized service personnel.
- Do not repair or modify any damaged cable by yourself. Ask authorized service personnel to do it. Improper work will cause an electric shock or a fire.
- When moving, consult authorized service personnel for uninstallation and installation of this product.
- Do not touch with wet hands. It may cause an electric shock.
- If children may approach this product, take preventive measures so that they cannot reach this product.
- Do not repair or modify by yourself. It may cause a fault or accident.
- Do not use flammable gases near this product. It may cause a fire from leaking gas.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of this product by a person responsible for their safety. Children should be supervised to ensure that they do not play with this product.



CAUTION

This mark indicates procedures which, if improperly performed, might possibly result in personal harm to the user, or damage to property.

- Do not set vessels containing a liquid on this product. Doing so will cause heating, fire, or electric shock.
- Do not expose this product directly to water. Doing so will cause trouble, electric shock, or heating.
- Dispose of the packing materials safely. Tear and dispose of the plastic packing bags so that children cannot play with them. There is the danger of suffocation if children play with the original plastic bags.
- Do not place electrical devices within 1 m (40 in) of this product. It may cause malfunction or failure.
- Do not use fire near this product or place a heating appliance nearby. It may cause malfunction.
- Do not touch the switches with sharp objects. Doing so will cause injury, trouble, or electric shock.

OPERATING TIPS

Cooling/heating priority
(Heat pump model only)

- If another indoor unit in the same system is already operating in the cooling mode or dry mode, heating mode settings cannot be performed.
- An indoor unit that is set up as a primary indoor unit can operate in the AUTO mode.
- Primary indoor unit:
The primary indoor unit has priority for cooling and heating configurations.

Airflow direction setting

- When using this product together with a wireless remote controller, the airflow direction of the indoor unit may not match the direction shown on this product.
- When the airflow direction is set with combination use of wireless remote controller and this product, airflow direction setting shown on this product may differ from actual louver position of the indoor unit.
- When the airflow direction is set with combination use of wireless remote controller and this product in the same remote controller group, airflow direction setting shown on this product may differ from actual louver position of the indoor unit.

TROUBLESHOOTING

Before requesting service, perform the following checks:

Symptom	Problem
Does not operate at all.	• Has there been a power failure?
	• Has a fuse blown out, or a circuit breaker been tripped?
	• It is being controlled centralized?

If the problem persists after performing these checks, or if you notice burning smells or blinking of the indicator lamp, immediately stop operation, turn off the electrical breaker and consult authorized service personnel.

SPECIFICATIONS

Model Name		UTY-RSRYT
Input voltage		DC 12V
Dimensions & Weight	Height	120 mm (4-3/4 in)
	Width	75 mm (2-15/16 in)
	Depth	19 mm (3/4 in)
	Weight	120 g (4 oz)

OPERATION


OPERATION MODE

Press “ MODE” button to select the operation mode while in operation.



- * A heat pump model that is not set up as a primary indoor unit cannot operate in the AUTO modes.
- ** Fan cannot be selected for a heat pump model.
- *** Heating operation cannot be performed in the cooling only models.
- If the priority mode is set to “Priority on Primary indoor unit”, the operating mode of other indoor units except the primary indoor unit will be controlled by the primary indoor unit.
- If the operating mode of the primary indoor unit is set to “AUTO”, “AUTO” is displayed in addition to the indicator of current operating mode on other wired remote controllers except the primary indoor unit. In this case, operation of other indoor units is controlled by the primary indoor unit.

Ex.: When operating mode of the primary indoor unit is set to “AUTO” while air conditioning setting.
(The indication on other wired remote controllers except the primary indoor unit).

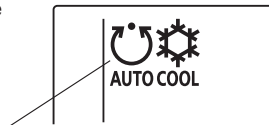

When the primary indoor unit is set to “AUTO”.


TEMPERATURE

Press the “ TEMP. ^” button or “ TEMP. v” button to set the room temperature while in operation. (The temperature setting should be considered a standard value, and may differ somewhat from the actual room temperature.)

Temperature setting range

COOL/DRY/ AUTO*	18 to 30 °C (64 to 88 °F) or 20 to 30 °C (68 to 88 °F)
HEAT	VRF system: 10 to 30 °C (48 to 88 °F) Other system: 16 to 30 °C (60 to 88 °F)

* The lower limit of the setting temperature is different depending on the place of use.

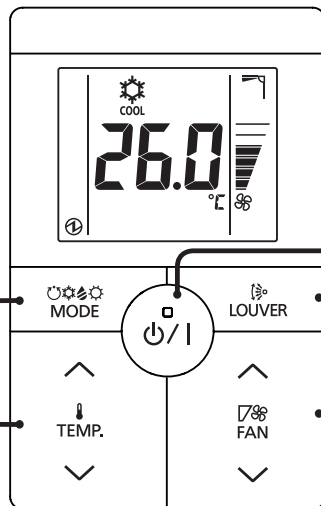


Instructions on heating are not applicable for the cooling only models.

START / STOP

Each pressing of the “/I” button changes operation and stop. During in operation, the indicator lamp (green) is on.


AIRFLOW DIRECTION

Press the “ LOUVER” button to set the airflow direction or the Swing mode.

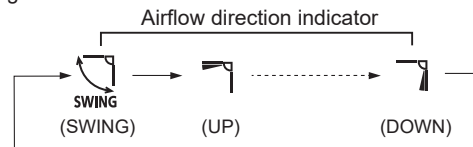

FAN SPEED

Press the “ FAN ^” or “ FAN v” button to select the fan speed while in operation. (The available fan speed differs depending on the indoor unit.)

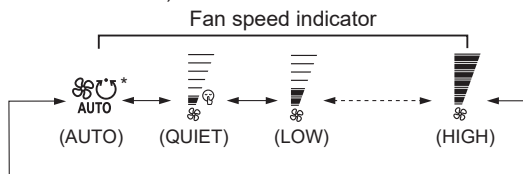

* The fan speed is set automatically.

NOTES:

- (1) is displayed if there is an error.
Stop the operation immediately and contact the administrator.
- (2) When a button is pushed to change a restricted setting, will blink.
When is displayed, there are functions for which settings cannot be made.
- (3) When is displayed, the air conditioner might not sufficiently cool the room in cooling mode, or sufficiently heat the room in heating mode. If does not turn off after a while, contact the administrator.
- (4) The inoperative setting of the indoor unit cannot be set.
- (5) • is displayed when operation of the air conditioner has stopped due to an emergency.
• is displayed when the air conditioner is in the test operation.